

K-205 "Mew Mew" 135 Film Camera User's Instructions

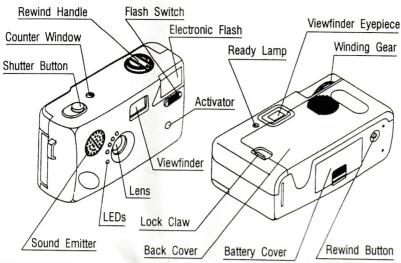


(1) Open the Battery Chamber Cover, and insert two pieces Alkaline Battery AA Size 1.5V, and close the Cover.

Chamber. Pull out the Film Leader and insert it into either slot of the Film Take-up Spool. Turn the Winding Gear make sure that the upper film perforations are engaged with the Sprocket Teeth.

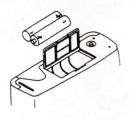

(2) Open the Back Cover By moving the Lock Claw slightly to the Left side.

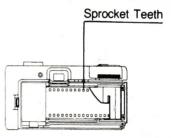

(4) Close the Back Cover and wind the Film to No. 1 in the Counter by release the Shutter during winding.





(5) Take picture from distance of 1.2 meter away.



(6) Use Strobe under following conditions:




Against the Sun

Indoor and against Window


(7) Switch ON the Strobe.Must switch OFF Strobe when not in use.



(8) When Strobe is ready, the Neon Lamp will light up. If Neon Lamp takes more than 30 seconds to light up, please change to new Battery.




(9) When finished taking one roll of Film of 12, 24 or 36, please rewind the Film back to Holder. Please continuously pressing the Rewind Button at the bottom of the Camera and proceed Item 10.



(10) Raise up the Rewind Handle, and follow the Arrow direction to rewind the Film, until the Handle become little tight, rewind is over.



(11) Same as Item 2, open the Back Cover and take out the Film.

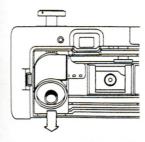

Sound and Light Effects

On the front side of the camera, there is a button just above the imprinted Holga logo. Whenever this button is pressed, the camera will make the cry of a cat three times and the five LED lights to the left of the taking lens will also be lit up at the same time.

NOTE:

- (1) For better result, please use ISO 200 film or ISO 400 film for taking indoor pictures.
- (2) Take out the Battery if the Camera will not be used for long time.

Specifications

Camera Type: 35mm camera with built-in

electronic flash

Lens: 35mm f8 Focusing: Focus free

Film Advance: By thumbwheel

Film Rewinding: Rewind button and crank Flash Recycle time: Under 8 seconds with fresh

batteries

Power: Two 1.5V AA alkaline batteries

Dimensions: 132 x 70 x 46mm

Specifications subject to change without notice.

12032009