
# micro-110 instructions

### LOADING THE FILM

- Lift up the Viewfinder and open the Back Cover.
- Insert a 110 film cartridge into the camera and close the Back Cover until it snaps shut.
- Turn the Film Advance Wheel until it locks, and the number "1" appears in the film counter window.
- The Micro-110 is now ready for picture-taking.


Note: Use ISO 100 film in bright sunlight.

Use ISO 400 film in cloudy weather or in the shade.

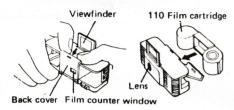

## TAKING PICTURES

- Swing the Viewfinder upright. Look through the Viewfinder and compose your picture.
- Hold the camera in the horizontal position, facing the subject straight. Place your eye at 4-5 cm from the Viewfinder when looking through it and center your subject in the Viewfinder frame.
- Hold the camera steady with both hands and press the Shutter Release Button gently.
- To take the next picture, turn the Film Advance Wheel until it locks.

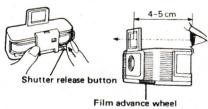

### END OF FILM

The film has come to its end when the mark "X ← X" appears in the film counter window. Turn the Film Advance Wheel until it locks, then open the Back Cover and take out the cartridge.

## SPECIFICATIONS

Film:

110 cartridge film. ISO 100/200/400. 12-shot

or 24-shot cartidge.

Lens:

f/8, 25mm

Shutter:

Mechanical, 1/125 sec.

Focus:

Fixed, 1m to infinity Mechanical advance wheel

Film advance:

Dimensions:

82x32x34mm (WxHxD)

Weight:

30g (without film)

Package contents:

Camera, Carry strap

Specifications are subject to change without prior notice.